



FUSIBLE LINKS A & B IN E32

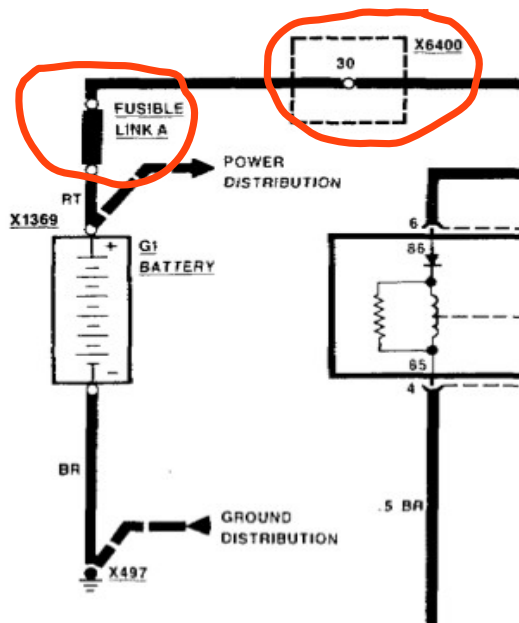

X6400 is the power post inside the E box. It feeds only DME loads.

Page 1361-01 for M30 and 1367-00 for M70.
Fusible Link A is 50 Amps.


BMW 7 POWER DISTRIBUTION REAR POWER DISTRIBUTION BOX

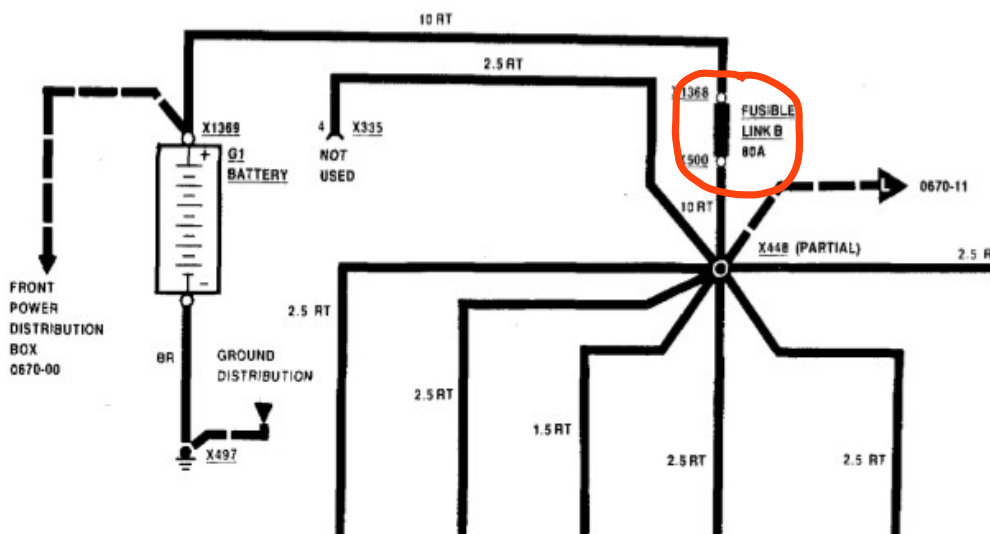

Page 0670-10 Fusible B is 80 Amps. It feeds all the Rear Power Box loads



Fusible Link A

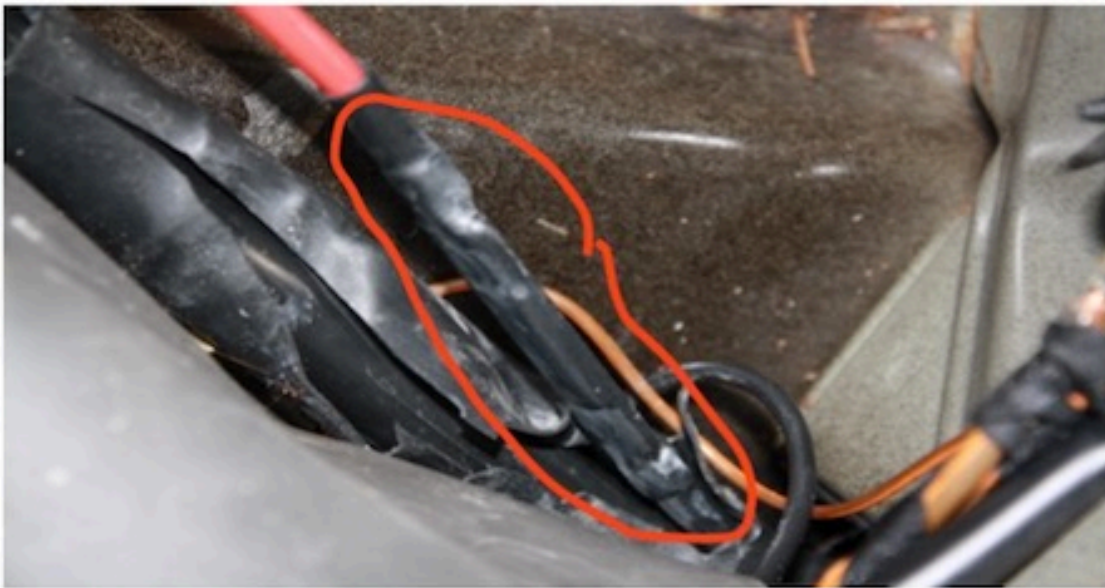


Fusible Link A is under the heatshrink



Fusible Link B with cover closed. Just squeeze the cover to open.



Fusible Link B with cover open.

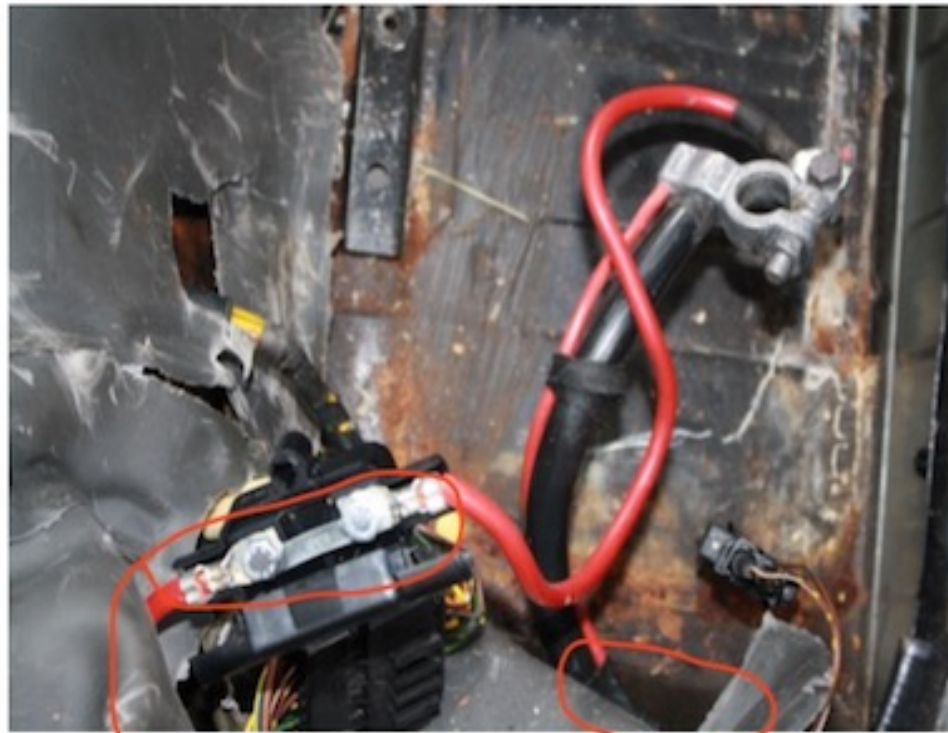

Fusible Link B

Fusible Link A

By E32FAN – Nov 2, 2015